

Cleaning

In order to maintain printer performance, it is important that it is cleaned regularly.

Refer to printer user's manual for more information.

Maintenance

It is very important to maintain your Javelin card printer properly according to the instructions provided in the printer user's manual.

If you have any difficulty with your new Javelin card printer and have not been able to find a solution in the user's manual, please contact your dealer or visit our website: **www.nbstech.com**

How to return your printer

It is very important that all packing material is safely kept in case you need to move or re-ship the printer. Be sure the complete packing material is stored in a dust free environment.

Remove ribbon cartridge prior to packaging the printer for shipment and place it back in the dedicated area in the printer box.

Before returning the printer to your dealer or to NBS, please refer to the printer user's manual.

Thank you for choosing the JAVELIN® card printer!

J100i QS
February 2008



Javelin®

J100i
Colour Card Printer

Quick Start!



Before starting to work with your new JAVELIN® card printer, please refer to this Quick Start guide. For more complete information regarding all aspects of your printer's operation, please refer to the printer user's manual on the CD rom.



J A V E L I N

www.nbstech.com
980598-001

Setup


1. Unpack your JAVELIN® card printer

Make sure the following items are included:

- Power & USB cables
- Power transformer
- Ribbon cartridge
- Driver and documentation CD
- Quick Start guide (this document)
- Card Cleaning kit
- Printer Cleaning kit


If any items are missing, please contact your dealer.

2. Open lid

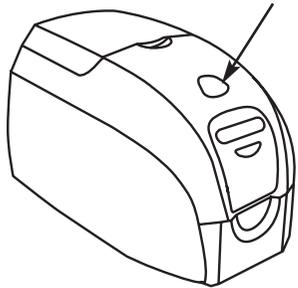

Open printer lid by pressing the cover release button on the top of your printer.

3. Black printer roller

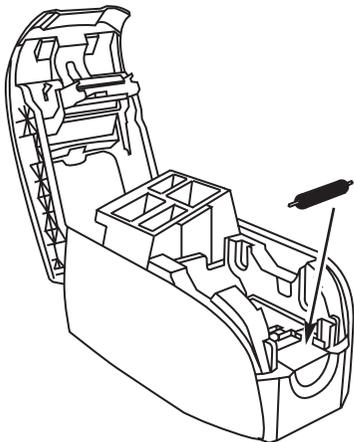


Ensure printer is turned off.

Remove the small black printer roller from the card cleaning kit and place it between the blue clips behind the card entry slot.

While pressing the roller down, turn power on. You will hear a loud click as the roller is secured. At this point, let go of the roller and turn power off.

4. Card cleaning cartridge

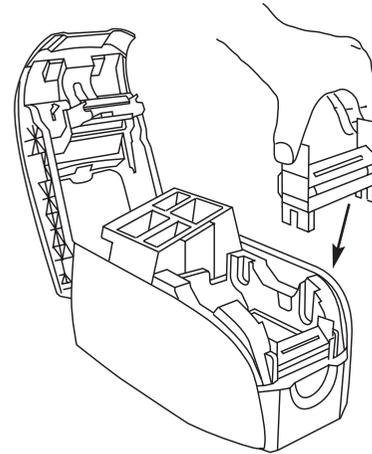


Remove the card cleaning cartridge from the card cleaning kit.

Lift the small lid of the cartridge and remove the white adhesive roller.

Gently peel off the wrapper and replace back into the cartridge. Avoid touching the roller surface.

Close cartridge lid and install into printer - behind the card entry slot - by gently squeezing the two clips.


5. Loading ribbon cartridge

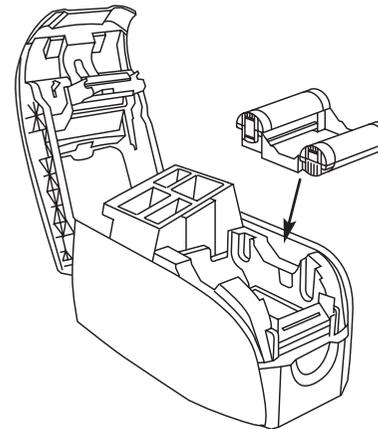

Peel off protective wrapper by gently pulling on the tape.

Insert the ribbon cartridge so the gears on the ends of the rollers fit into the appropriate slots.

Close the printer lid and push down until you hear an audible click.

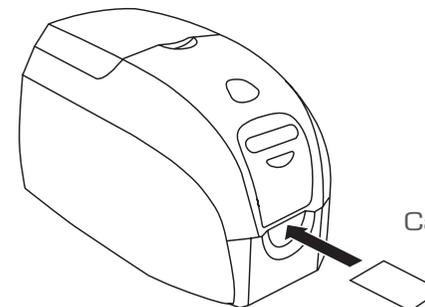

Card will exit from slot after printing.